


# touchCUE-5

CS0371




## Description

 Front View

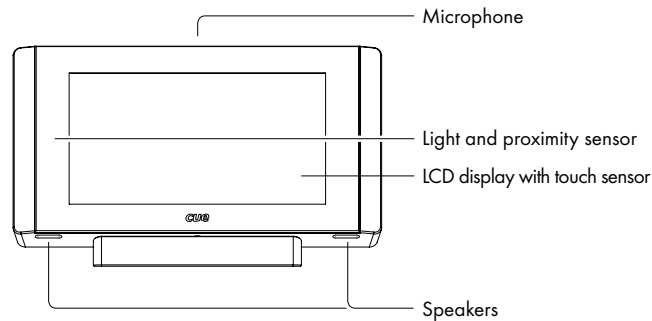

Rear View

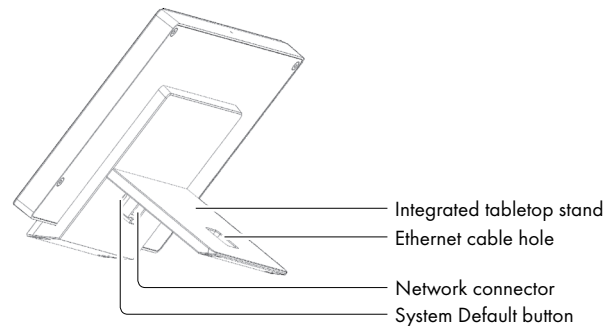 


## Box Contents


- Touch panel touchCUE-5
- Power supply with PoE injector incl. power cable
- Flat Ethernet cable
- Cleaning tissue
- Data Sheet
- Cue System Connector Wiring Sheet
- Declaration of Conformity
- Warranty Conditions

## Connection
 
### Ethernet without PoE Infrastructure

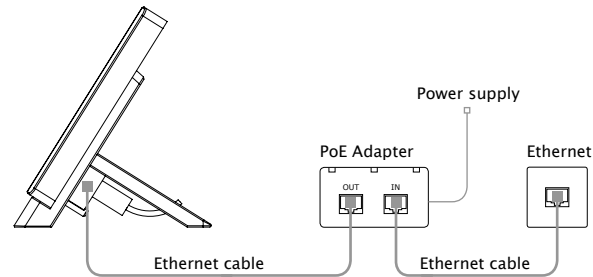

### Ethernet with PoE Infrastructure

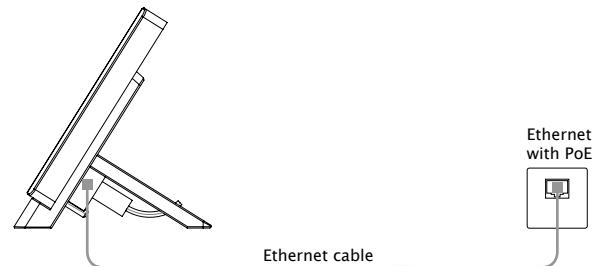 

## System Default Setup

 
When System Default button is pressed, the system default function is performed and setup is as follows

- IP address: from DHCP
- IP Mask: from DHCP
- Password: Empty (no input required)
- Alternate IP address (network without DHCP server): 192.168.1.128
- Alternate IP mask: 255.255.255.0

## Installation

Installation steps are as follows

1. Install the network cable as described on the following picture and connect the network connector.

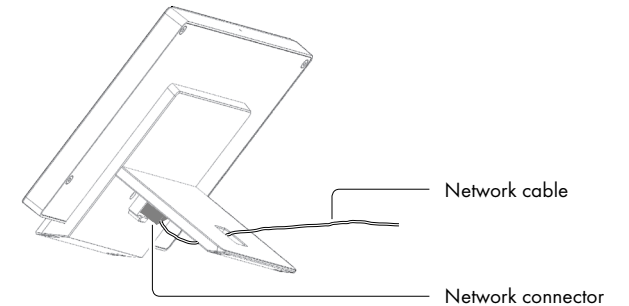

2. Place the touch panel on a table.

## User Manual

Complete user manual can be downloaded here:  
[http://www.cuesystem.com/user\\_manuales.aspx](http://www.cuesystem.com/user_manuales.aspx)