


touchCUE-12

CS0466




Description

Front View

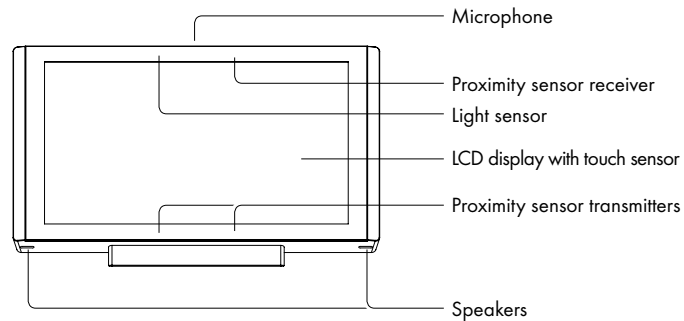

Rear View

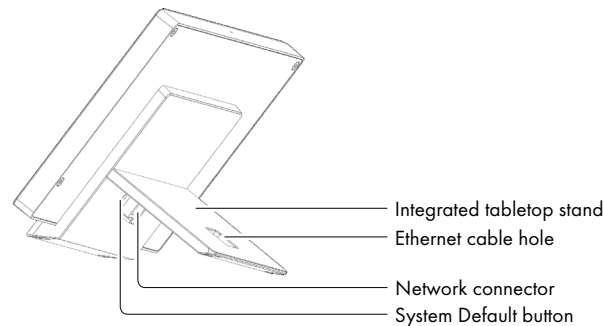

Box Contents

- Touch panel touchCUE-12
- Power supply with PoE+ injector incl. power cable
- Flat Ethernet cable
- Cleaning tissue
- Data Sheet
- Cue System Connector Wiring Sheet
- Declaration of Conformity
- Warranty Conditions


Connection




Important Note

This touch panel requires Power over Ethernet Plus (PoE+), IEEE 802.3at compatible power supply.

Ethernet without PoE+ Infrastructure

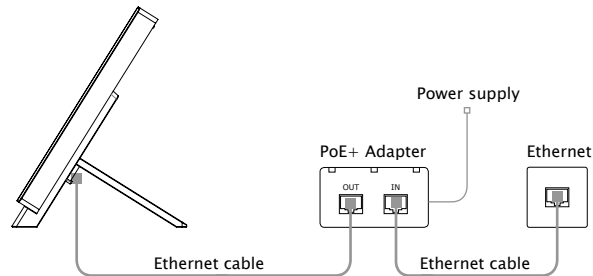

Ethernet with PoE+ Infrastructure

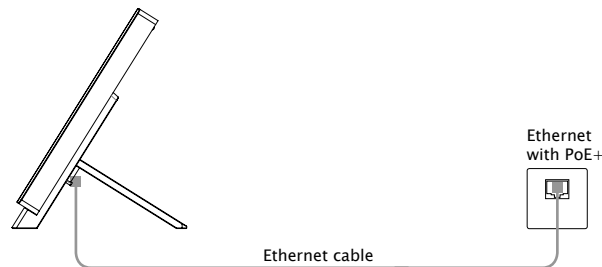

System Default Setup


When System Default button is pressed, the system default function is performed and setup is as follows

- IP address: from DHCP
- IP Mask: from DHCP
- Password: Empty (no input required)
- Alternate IP address (network without DHCP server): 192.168.1.128
- Alternate IP mask: 255.255.255.0

Installation

Installation steps are as follows

1. Install the network cable as described on the following picture and connect the network connector.

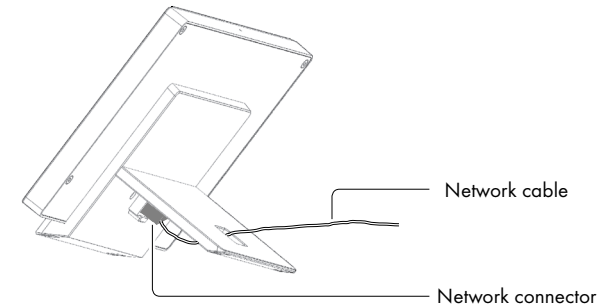

2. Place the touch panel on a table.

User Manual

Complete user manual can be downloaded here:
http://www.cuesystem.com/user_manuals.aspx